

RC900

CAUTION - READ BEFORE OPERATING - QUICK START INSTRUCTIONS



STEP 1:

The RC-900 will need to be charged upon receipt. It is shipped with a charge. So before disconnecting the "Activation Key" in the right finger hole, make sure the ball is in a secure position as the internal weight will shift upon start up.



STEP 2:

The Activation key is used to turn on and off the handset, as well as turn off the ball when not in use. Be careful not to damage or misplace. If lost, a paperclip can be used to turn the handset on and off.



STEP 3:

To charge the rechargeable battery in the ball, plug the outlet into any 110 volt wall outlet, and connect the charger jack into the right hand side finger hole. The LED light on the charger will be red, indicating that it is being charged. Charge will take 2-3 hours. Charge will be complete when red light switches to green.



STEP 4:

In order to install the battery in the handset, remove the slide plate cover screw on the backside, slide the cover off, and install battery.



STEP 5:

To link the ball and handset, unplug the charger or remove the activation key from the ball. When this is done, a green LED light will begin flashing next to a red LED light in the ball. The weight will shift left, then right, then back to center.



STEP 6:

Next, turn the handset over and insert the activator key into the hole marked "on". Now turn the remote over and the red LED light will be on.



CAUTION - READ BEFORE OPERATING - QUICK START INSTRUCTIONS



STEP 7:

Press the left button on the handset then the right button. The green LED light will flash. Hold the handset close to the ball and the two will link together.

STEP 8:

When the ball and handset link, the flashing green LED light, will turn solid to indicate that the ball and remote are now linked. The weight will now move left or right when the handset is pushed. The ball is now ready for use.

*** Note:** when the ball is not in use, the activation key or the charger will need to be plugged into the ball to prevent the battery from running down.

** Note:

If ball and handset become unlinked for some reason, the solid green LED lights will go back to flashing. The ball and handset may link back up on their own. If not, turn both back off and re-do the linking procedure starting with STEP 5.